


Features Of Your New Meter

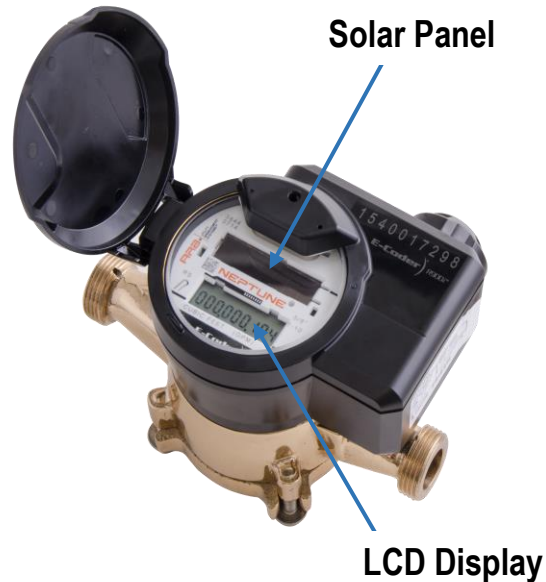

Neptune Technology Group will read your meter for billing purposes, but **should you wish to monitor your own consumption**, here's how:

- Continually shine a flashlight over the solar panel (located on the register) to activate the LCD display *
- Take a reading at a set time of the day
- Take a 2nd reading at the same time the next day
- The difference between the two readings is your daily water consumption

Leak Indicator

- ◆ **OFF** – indicates no leaks
- ◆ **Flashing** – water usage for more than 50% of time in 24 hour period
- ◆ **Continuous ON** – there is most likely a leak in your home



The 9 digit LCD displays your meter reading in cubic metres.
 1 cubic metre = 1,000 litres
 1 cubic metre = 220 imperial gallons
 The last four digits of the reading are decimal points. In the example above, the meter reading is 26.3987 cubic metres.

Flow Indicator

- ◆ **ON**– water in use
- ◆ **OFF** – water not in use
- ◆ **Flashing** – water is running slowly
- ◆ **(-)** - indicates reverse flow
- ◆ **(+)** – indicates forward flow